

Wi-Fi® QUICK SETUP GUIDE

Thank you for purchasing this product.
Please read these instructions carefully before using this product,
and save this manual for future use.

SQC0359
F0116BL1016

- This guide describes how to connect this system to a network while starting up and operating the Panasonic Music Streaming app.
- The operations and on-screen display items, etc. of the app "Panasonic Music Streaming" are subject to change.
For the latest information, visit <http://panasonic.jp/support/global/cs/audio/app/>
(This site is in English only.)

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
The Wi-Fi Protected Setup™ Identifier mark is a certification mark of Wi-Fi Alliance®.
"Wi-Fi®" is a registered trademark of Wi-Fi Alliance®.
"Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.
Google Play and Android are trademarks of Google Inc.
App Store is a service mark of Apple Inc.
All other trademarks are trademarks of their respective owners.



1 Download the app

Download the free "Panasonic Music Streaming" app from the store on your smartphone/ tablet.




iOS : App Store




Android : Google Play™

 


2 Open the app and follow the on-screen instructions

Select ALL9 or ALL6.



 
 
Connect.

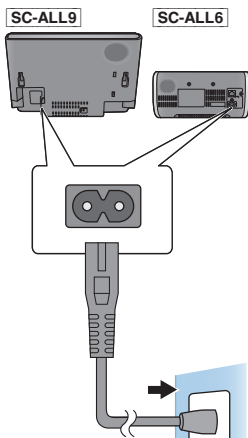

NOTE:
Do not connect the LAN cable.

 
Turn on the unit.

Wait until the network indicator stops blinking in blue and red, and starts blinking in blue.

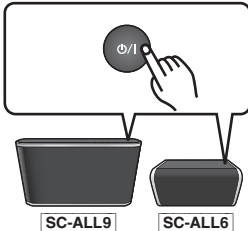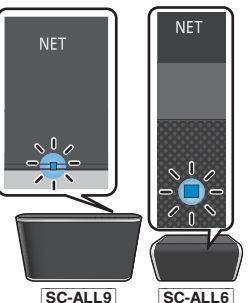The blinking in blue starts after approximately 60 seconds. If the blinking in blue does not start, restore the factory defaults. (see Operating instructions)

Enter the password for the wireless network that you want to add.

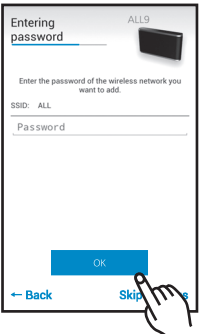

 
iOS :
Before following the step above, follow the steps below.

1. Go to wireless settings on your smartphone or tablet.
2. Select "AllPlay []_AJ".*
3. Type a device name, select your network name (SSID) and type the password.

* This can sometimes take 1 minute to appear.

3 After a short wait ...you're connected!

The network indicator lights up in blue.

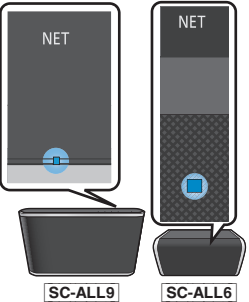

In case you are not connected automatically, please re-select your Wi-Fi network from the settings / Wi-Fi settings menu on your device.

Further Support

For more information and other network setting methods, refer to the Operating Instructions.
If you require further help, please visit <http://panasonic.jp/support/global/cs/audio/>
(This site is in English only.)