◆ About the Upgrade of the DMC-FX90 Firmware

The following functions were added or changed from firmware Ver. 2.0 for the camera.

Please read this in conjunction with the operating instructions for the camera.

• The firmware version can be checked from the [Version Disp.] of the [Setup] menu.

[Live Control] has been added to the menu at recording.

This allows you to connect a smartphone to your camera and view images from your camera on the smartphone. With zoom and shutter operations now available on a control panel displayed on the smartphone, you can remotely record still pictures.



| Menu | Description of settings |
|--------------------------------------|--|
| [Live Control] (Recording Mode only) | You can connect the camera to a smartphone and set Live Control. |

To use the Live Control function, installation of the smartphone application "LUMIX remote" is required.

• The smartphone application "LUMIX remote" is required to enable you to view camera images and record still pictures on your smartphone.

■ Install the smartphone application "LUMIX remote"

Download "LUMIX remote" (available free of charge) using the method below.

- 1 Connect the smartphone to the network.
- 2 Search for "LUMIX remote" in the "Google Play™" (formerly "Android™ Market") (for Android apps) or in "App StoreSM" (for iOS apps).
- 3 Select "LUMIX remote" and install it.
 - The [] icon will be added to the menu.





• Compatible OSes (current as of May 2012).

For Android apps: Android 2.2~Android 4.0 For iOS apps: iOS 4.3~iOS 5.1

• The service may not be able to be used properly depending on the type of smartphone being used. For compatible devices, see the following support site.

http://panasonic.jp/support/global/cs/dsc/ (This Site is English only.)

- When downloading the application on a mobile network, high packet communication fees may be incurred depending on the details of your contract.
- Android and Google Play are trademarks or registered trademarks of Google Inc.
- App Store is a service mark of Apple Inc.

■ Connect your smartphone and camera

- Perform operations on the camera to display the SSID and encryption key.
 - In Recording Mode touch [MENU], and then touch [MENU] ([Live Control]).



- 2 On the smartphone's Wi-Fi setting screen, set the camera as the connecting device and enter the encryption key displayed on the camera.
 - When the connection is completed, a message appears on the camera indicating that live control will be displayed on the smartphone.
- 3 On your smartphone, start the smartphone application "LUMIX remote".
 - The recording screen is displayed on the smartphone and [Under remote control] appears on the camera.
- Note
- Touch [Change AP] on the screen shown for Step 1 to connect the camera to your smartphone via a wireless access point (broadband router).
- Refer to the smartphone instruction manual for further information on how to connect the smartphone.

■ Using the smartphone application "LUMIX remote"



* The screen differs depending on the operating system.

- - Two zoom speeds are selectable.
 - When zooming, a zoom indicator bar appears at the bottom of the recording screen.
- Name of the connected device
- Number of recordable pictures
- 4 Camera battery indication
- 6 Menu display
- Shutter
 - Pictures are recorded according to the Normal Picture Mode settings on the camera. ([Auto Bracket] and [Burst] are not available.)
 - · Motion pictures cannot be recorded.
 - When [Auto Review] is set to [Hold], each photo is displayed for [2 sec.].
- Read the "Help" in the "LUMIX remote" menu for further details on how to operate.

■ Sending recorded pictures to a smartphone

Pictures recorded using the Live Control function are stored in the built-in memory of the camera or on a card.

- To send images to your smartphone, the smartphone application "LUMIX LINK" is required. (For further details, see the operating instructions of your camera.)
- 1 After recording, touch [Send picture] displayed on the camera.
- 2 On your smartphone, start the smartphone application "LUMIX LINK".
 - Connectable smartphones are listed on the camera. Touch the destination name and touch [OK].
- 3 Touch the sent images and confirm that the selection frame (yellow) is displayed when you remove your finger.
 - Touch the same image again to cancel the selection.
 - · You can select a number of images.
 - All recorded images, including the pictures that are not recorded with Live Control function are displayed.
- 4 Drag images upwards in the selected state.
 - The sending operation can also be performed by touching [Set].
 - All the images selected in step 3 are sent.
 - A message is displayed when the image has been sent. Touch [OK].

