

 
ES-WB20

Use Precautions

Please observe the following to avoid damage/malfunction of the appliance.

After use, store the appliance in a place with low humidity.

- Leaving the appliance in your bathroom, etc. may lead to the formation of condensation and rust inside the main unit, which can cause malfunction.

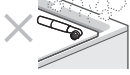

Do not drop the appliance or hit it against other objects.

- This may cause malfunction of the appliance, or cracking, deformation, etc. of its components.




Caution

The following individuals should not use this appliance:

- Individuals with sensitive skin or prone to skin irritation, and individuals with allergic diathesis (Use in such cases may damage the skin, cause inflammation, etc.)
- Individuals who are pregnant or have given birth within the last month (Hormonal imbalance may lead to skin problems.)

Do not use on the following areas:

- The anus, mucosa, and genitals other than the labia majora
- Pre-existing injuries, eczema, bruises, warts, acne, etc., and surrounding areas
- Areas with loose skin (Use on such areas may damage the skin, cause inflammation, etc.)
- Areas where hair has been removed on the same day (Use on such areas may cause problems for your body, including your skin.)

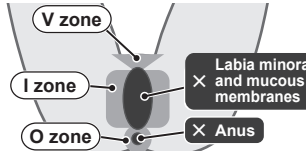

Do not use if you have vaginitis, vulvitis, or other inflammations.

(Use in such cases may cause symptoms to worsen.)

Do not use physical / chemical (keratolytic) exfoliating cleansers.

(They may damage your skin or cause pigmentation and other issues.)

Use this appliance only to care for the V/I/O zone.

Before using, check that the brush and head are not deformed, cracked, or damaged.

When using the appliance on an area that is visually inaccessible, check the area by positioning yourself to get a good view.

(Failure to do so may lead to skin damage or inflammation, etc.)

Stop using the appliance if skin problems occur during or after use, and consult a dermatologist.

(Failure to do so may cause symptoms to worsen.)

Observe the following during use.

- Do not press this appliance hard against your skin but move it slowly.
- Do not rub the same area repeatedly. (Failure to do so may damage your skin or cause inflammation.)

Do not short-circuit the battery terminals.

(Doing so may cause burns or injury.)

Follow the precautions printed on the battery.

Set the battery correctly, observing the positive (+) and negative (-) terminals.

When the battery is depleted, remove it immediately.

Remove the battery when not using the appliance for an extended period of time.

Use a battery that is within its use-by date.

When using a rechargeable NiMH battery, read the instruction manuals for the battery and charger and use them correctly.

(Failure to do so may cause the battery to overheat or explode. It may also cause it to leak, leading to injury or contamination of its surroundings.)


Do not share with your family or others.

(Doing so may cause infection or inflammation.)

Do not modify, disassemble, or repair.

(Doing so may cause accidents or injury.)
→For repairs, consult the store where you purchased the appliance.

Names of Parts

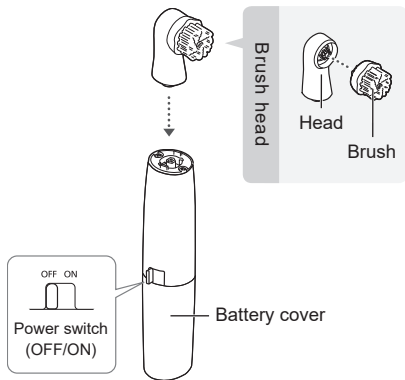


- Battery not included. Please purchase separately.

Attaching/Removing the Head/Brush

Attaching/removing the brush head

- Align the indicator line on the brush head with the attach position on the main unit, and insert the brush head.

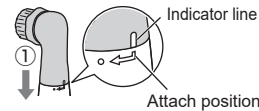

- Rotate the brush head until its indicator line aligns with the lock position on the main unit.



- To remove the brush head, reverse the procedure (follow step ②, then step ①).

Attaching/removing the brush

Removing

Pull straight out.



Attaching


Push straight in.



Basic Use Process

- Attach the brush head.


- Slide the power switch to "ON".

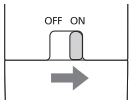

- With your hand, stretch the skin of the area you wish to clean, and clean by slowly and gently moving the main unit.

- Keep the brush head in contact with your skin, and move the main unit slowly.

- Slide the power switch to "OFF" after use.

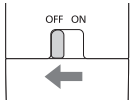

- Clean the appliance after use.

Using the Appliance

- We recommend that you use the appliance after trimming your hair short. (The appliance can be used even if you have hair growing on your VIO zones.)
- Do not use on the same area for an extended duration of time.
- Make sure to wash the appliance with water after each use.

- Moisten the brush and your body with warm water.

- Apply soap for VIO zones to your body.

- Briefly lather the soap before application.

- Move the brush along your skin.

Treating your

V zone



Hold the skin taut with your hand.

Gently press the brush against your skin, and move it slowly so as to caress it.

Treating your

I zone and O zone



Hold the skin of your I zone taut with your hand.

Gently press the brush against your skin, and move it slowly so as to caress it.

■ Tips on moving the appliance

Clean from the front of the I zone to the back (toward the O zone)



Recommended postures

Put one foot on a chair and look in



Sit on a chair and look in



Crouch down and look in



Cleaning

- Clean the appliance after use.
- Remove the head and brush when cleaning the appliance.
- When shaking water off the components, be careful not to hit them against the sink, etc. (Doing so may cause damage to the components.)
- Do not wipe with alcohol, nail polish remover, etc. (Doing so may cause malfunction of the appliance, or its components to crack, change color, etc.)

① Thoroughly rinse off with water the VIO-zone soap on the main unit, head, and brush.

- VIO-zone soap tends to remain on the brush, so rinse it especially carefully.
- Residual VIO-zone soap can prevent the brush from operating smoothly. In such cases, leave the brush in warm water and rinse.



Do not remove battery cover while washing with water.



② After drying off water droplets using a towel, etc., allow the parts to dry naturally in a location with low humidity.

- Dry with the head/brush removed from the main unit.



Separately Sold Products

Product name	Product no.
Spare brush	ES-2W20-H

- Rinse gently and thoroughly with warm water.