


EH-KN9L

Parts Identification

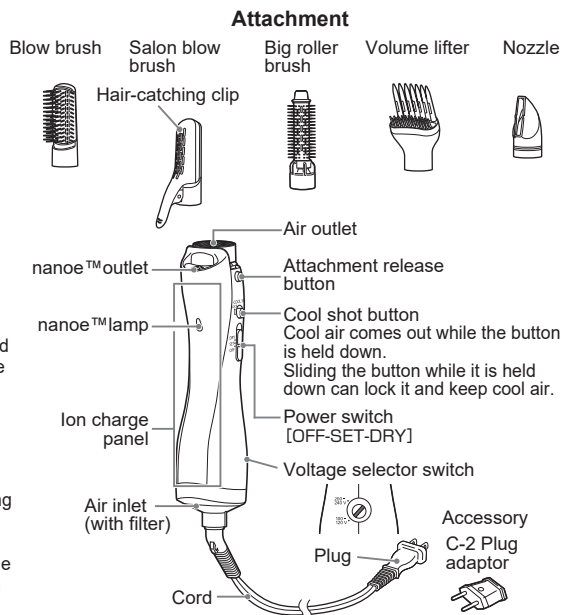

◆ Feature of nanoe™

Reducing unwanted waves and making your hair more shiny and easier to manage by keeping optimum moisture balance.

◆ What is nanoe™?

nanoe™ is invisible nano-sized ions contained in water. It is generated by collecting moisture in the air and may not be generated depending on the use environment.

◆ Ion charge

Keeping exposure to nanoe™ makes hair negatively charged. The negatively charged hair reacts against nanoe™ and starts keeping it off.

To prevent this, simply grasp the ion charge panel to release negative charge stored on the hair and enable nanoe™ to penetrate making your hair moisture-rich to the tip.

⚠ WARNING

To protect your hair

- Do not wind too much hair around the attachment. (Doing so may cause burn or singed hair.)
- Do not wrap bundles of hair around the barrel more than 1.5 times, and do not curl up to your roots.
- Do not curl and uncurl hair diagonally as shown in the diagram.
- Do not tangle hair other than the hair bundle in the brush.
- Do not curl large bundles of hair all at once. (Doing so may cause hair to become tangled resulting in damage, or burn.)
- Do not use with the air inlet damaged. (Doing so may cause the hair to become tangled in the air inlet, resulting in damage to the hair.)
- Be careful not to allow hair to get sucked into the inlet during use. (Failure to do so may cause the hair to become tangled in the air inlet, resulting in damage to the hair.)

Be also careful of the following:

- Do not drop or subject to shock. (Doing so may cause electric shock or ignition.)
- Do not apply hair spray directly to the appliance (including the attachment) during use. (Doing so may cause fire, electric shock, or burn.)
- Do not use the appliance for any purpose other than the care of your own hair. (Do not use on pets, or to dry clothing, shoes, etc.) (Doing so may cause fire or burn.)
- Do not use on infants. (Doing so may cause burn.)
- Do not look into the air outlet while in use. (The hair styler blows air with dust, etc. possibly resulting in injury.)
- Do not touch the shaded areas when in use or right after use since they will be hot. (Doing so may cause burn.)

How to Use

Preparation

- 1 Roughly remove water from your hair with towel.
- 2 Untangle your hair with a brush or fingers.
- 3 Insert the plug into an outlet.

Drying / styling the hair

1 Attach the attachment.

Turn off the power switch.


•How to attach

Align the cut of the attachment with the projection of the body and press to set it until it clicks.

•How to detach

Hold down the attachment release button and detach the attachment.

See below for how to attach the attachments.

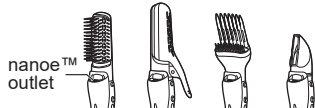

2 Turn on the power switch

The nanoe™ lamp lights.

DRY	: High hot wind
SET	: Low hot wind
OFF	: Stop

After use, turn off the power switch and disconnect the plug from the outlet.

After the dryer cools down completely, store it in a dry place.



Volume lifter

- Apply both long comb and short comb so that they contact with your skin.
- Slide the brush in the opposite direction to the hair growth.

Adding volume to the hair

Sufficient volume may not be created if the brush is not contacting your skin.

•Lifting the front part

Move the brush slowly several times from the front hairline to the top.

•Lifting the side part

Move the brush slowly several times from above the ear to the top.

•Lifting the top part

Lift the top part of hair with your hand and move the brush from various directions, i.e. from the front, back, right and left.



Blow brush

Blowing the hair

•Straightening

Apply the brush to the outside and inside of the hair.

While putting a hand along the hair, slide the dryer from the root slowly at a constant speed.

•Curling inward / outward

Turn the brush in the direction you prefer.

Inward curl: Turn the brush inward.
Outward curl: Turn the brush outward.

Tip

To keep the style longer: Use the cool shot button. After setting with hot wind, finish by brushing the hair two or three times with cold wind.

STYLING POINT

To straighten from the root
Separate the hair into sections.

Separate the hair into sections and clip them with hair clips.

- Separating the hair into upper and lower sections helps you clip them easily.



Big roller brush

Styling the tip of the hair

•Curling the tip

Turn the brush in the direction you prefer and curl the hair by one and a half turns from the tip.

Tip

To make long lasting curls: Use the cool shot button. After curling the hair with hot wind, roll the tip of the hair with the brush and apply cold wind three to five seconds.

Styling the bangs

•Curling the bangs inward

Pull the bangs to the front and curl them inward from the tip.

• Styling the bangs to the side
Hold the brush upright and curl the bangs outward (to the back) by one and a half turns from the tip.



Salon blow brush

Smoothing the hair

•Straightening

1 Set a section of hair in between.

Lift a section of hair of about 5 cm width and set it in between while keeping the hair-catching clip outside.

2 Slide the brush to the tip of the hair.

Slowly slide the brush to the tip of the hair.
• If it is hard to slide, set a smaller section of hair.

•Curling inward

1 Set a section of hair in between.

Lift a section of hair of about 5 cm width and set it in between at about 10 cm from the tip of the hair while keeping the hair-catching clip outside.

2 Slide the brush to the tip of the hair.

Slowly slide the brush to the tip of the hair and curl it inward.
• Do not curl by more than one and a half turns.

3 Open the hair-catching clip and release the hair.

Tip

To keep the style longer: Use the cool shot button. After curling the hair, set it in the brush and apply cold wind three to five seconds.

To prevent tangle of hair

When curling

Set a smaller section of hair and keep the brush at right angle to the hair while curling it straight within one and a half turns.

When releasing

Keep the brush as far as possible from your head and release the hair at the same angle as when curling.

- Do not curl too many turns or too much hair with the attachment. (Curl within one and a half turns while keeping the amount of hair not to come out of the brush.)

If the hair has tangled, immediately turn off the power switch and do not pull the body forcibly while untangling the hair gradually.



Nozzle

Drying the hair

Dry the hair from the root to the tip.

