

# Panasonic

## Quick Reference Guide

Integrated Telephone Answering system

Model No. **VE-GD25TA**



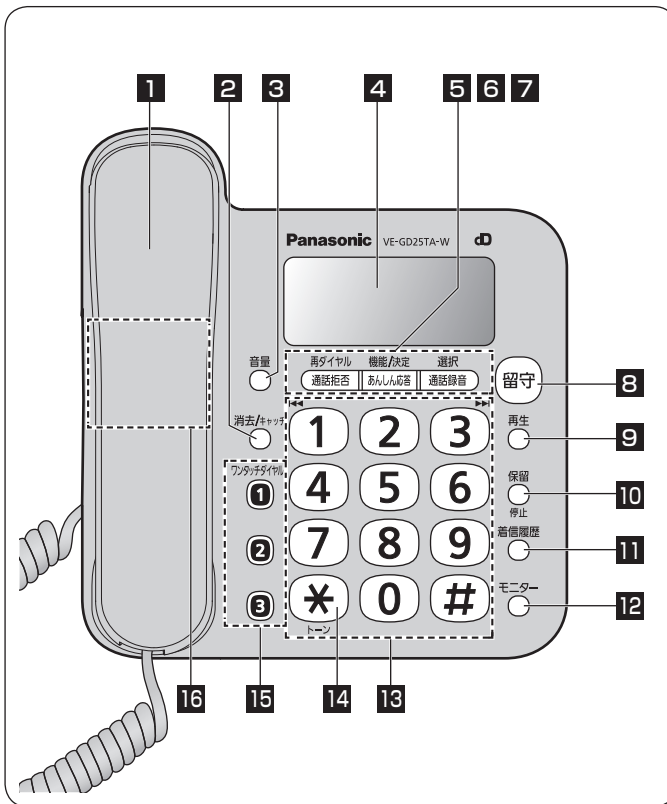
### Table of Contents

Parts Descriptions .....	2
Basic Operations .....	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

## Parts Descriptions



- 1** Handset
- 2** Clear/Flash button
- 3** Volume control button
- 4** Liquid crystal display
- 5** Block/Redial button
- 6** Secure/Function/Set button
- 7** Call Record/Select button
- 8** Auto Answer button & indicator
- 9** Playback button
- 10** Hold/Stop button
- 11** Caller ID button
- 12** Monitor button
- 13** Numeral buttons
- 14** Tone button (to switch to tone dialing)
- 15** One-touch Dial buttons
- 16** Speaker

## Basic Operations

- The number after the button shows the location of the button described in the previous page.


### ■ To make a call

Lift the handset. → Dial the phone number (13).  
→ Talk.


### ■ To receive a call

When the phone rings, lift the handset. → Talk.


### ■ To place the current call on hold

Press  (10) during a call.  
(You can place the handset on the base unit.)

### ■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press .


### ■ To use TAM (Telephone Answering Machine)


When you leave home, press  (8) to turn on the indicator.



(To deactivate, press  again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.



Then, the  indicator starts flashing.

→ When you return home, press  to play back the messages.

The  indicator turns off and the answering mode is deactivated.

After playing back the messages, press  (14) twice to erase the messages or press  to keep the messages.

To play back the messages while TAM is deactivated, press  (9).

After playing back the messages, press  twice to erase the messages or press  to keep the messages.

\*Up to 50 messages can be recorded for approx. 12 minutes in total.

### ■ To hear recorded messages while away from home (Remote control)

 

#### Preparation before you leave home


Store a remote control number.

With the handset placed on the base unit, press

 (6) →  0 0 6 → .


Enter the desired 4-digit number. → Press

, then press .

When you leave home, press  to turn on the indicator.

#### To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. →

Press . → You will hear recorded messages if any.

#### NOTE

- This operation can be made only from a touch-tone phone.

