

Quick Reference Guide

Facsimile

Model No. **KX-PD215DL** **KX-PZ210DL**
KX-PD215DW **KX-PZ210DW**
KX-PZ218DLE
KX-PZ218DWE

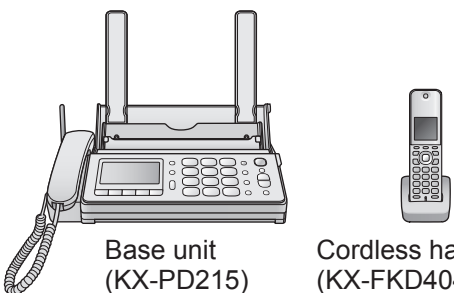
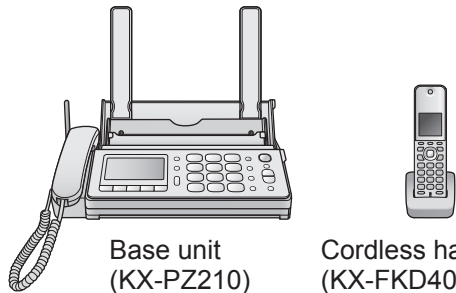
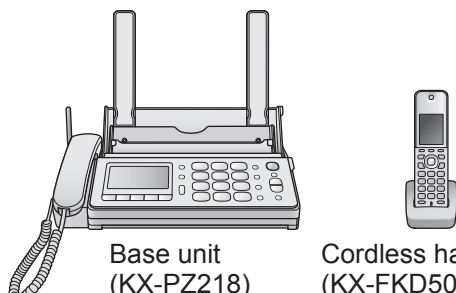
<p>KX-PD215DL/KX-PD215DW</p>  <p>Base unit (KX-PD215)</p> <p>Cordless handset (KX-FKD404)</p>	<p>KX-PZ210DL/KX-PZ210DW</p>  <p>Base unit (KX-PZ210)</p> <p>Cordless handset (KX-FKD404)</p>
<ul style="list-style-type: none"> • KX-PD215DL/KX-PZ210DL/KX-PZ218DLE includes 1 cordless handset and 1 base unit. • KX-PD215DW/KX-PZ210DW/KX-PZ218DWE includes 2 cordless handsets and 1 base unit. 	<p>KX-PZ218DLE/KX-PZ218DWE</p>  <p>Base unit (KX-PZ218)</p> <p>Cordless handset (KX-FKD506)</p>

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.


Parts Descriptions

 Base unit

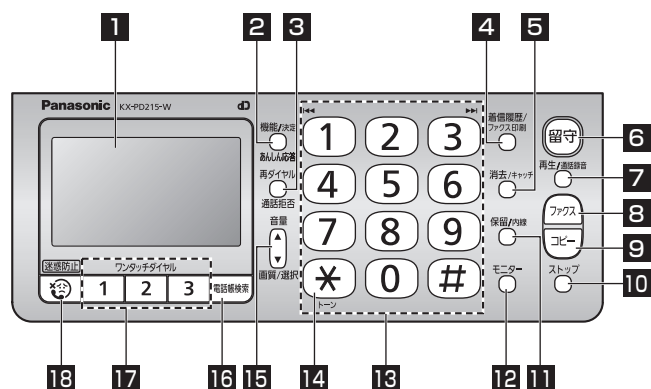

- 1 Liquid crystal display
- 2 Function/Set/Secure button
- 3 Redial/Block button
- 4 Caller ID Log/Fax Print button & indicator
- 5 Clear/Flash button
- 6 Auto Answer button & indicator
- 7 Playback/Call Record button
- 8 Fax button
- 9 Copy button
- 10 Stop button
- 11 Hold/Intercom button
- 12 Monitor button
- 13 Numeral/Character buttons
- 14 Tone button (to switch to tone dialing)
- 15 Volume control/Resolution/Select button
- 16 Search phonebook button
- 17 One-touch Dial buttons
- 18 Nuisance Call Prevention button

 Cordless handset

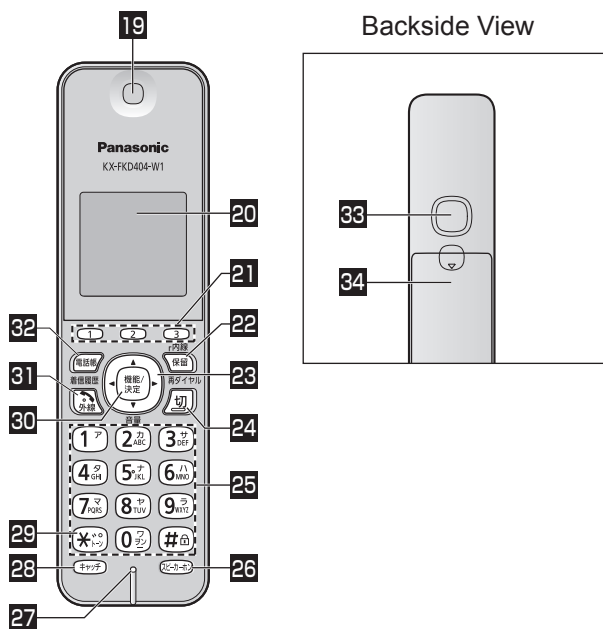

- 19 Earpiece
- 20 Liquid crystal display
- 21 Multi-operation/One-touch Dial buttons
- 22 Hold/Intercom button
- 23 Caller ID button (着信履歴)
- Redial button (再ダイヤル)
- Volume control button (音量)
- 24 Off button
- 25 Numeral/Character buttons
- 26 Speakerphone button
- 27 Microphone
- 28 Flash button
- 29 Tone button (to switch to tone dialing)
- 30 Function/Set button
- 31 Talk button
- 32 Phonebook button
- 33 Speaker
- 34 Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit

■ To make a call

Lift the handset. → Dial the phone number (13).
→ Talk.

■ To receive a call

When the phone rings, lift the handset. → Talk.

● When:

- document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
- press **【ファクス】** (Fax: 8).

■ To place the current call on hold

Press **【保留】** (Hold: 11) during a call. (You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press **【保留】**.

■ To transfer the held call to the cordless handset

Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【1】 - 【6】** (Intercom No.).) → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press **【留守】** (Auto Answer: 6) to turn on the indicator. (To deactivate, press **【留守】** again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the **【留守】** indicator starts flashing.

→ When you return home, press **【留守】** to play back the messages. The **【留守】** indicator turns off and the answering mode is deactivated.

After playing back the messages, press **【✕】** (14) twice to erase the messages or press **【#】** to keep the messages.

To play back all messages while TAM is deactivated, press **【再生】** (Playback: 7).

After playing back the messages, press **【✕】** twice to erase the messages or press **【#】** to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press

【機能】 (Function: 2) → **【#】** **【0】** **【0】** **【6】** → **【決定】** (Set: 2). → Enter the desired 4-digit number.

→ Press **【決定】**, then press **【ストップ】** (Stop: 10).

When you leave home, press **【留守】** to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press **【4】**. → You will hear recorded messages if any.

NOTE

- This operation can be made only from a touch-tone phone.

Cordless handset

■ To make a call

Lift the cordless handset from the charger and press **【外線】** (Talk: 31). → Dial the phone number (25). → Talk. → To end the call, place the cordless handset on the charger or press **【切】** (Off: 24).

■ To receive a call

When the phone rings, lift the cordless handset from the charger and press **【外線】**. → Talk. → To end the call, place the cordless handset on the charger or press **【切】**.

● When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard,

press **【機能】** (Function: 30) → **【▼】** **【▲】** (23) to select “ファクス ジュシン” or “ファクス受信”
→ **【決定】** (Set: 30) → **【はい】** (Yes: 21).

■ To make a call using the speakerphone (Hands-free talk)

Press **【スピーカーホン】** (Speakerphone: 26).

→ Dial the phone number. → Talk to the microphone (27). → To end the call, place the cordless handset on the charger or press **【切】**.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press **【スピーカーホン】**.

→ Talk to the microphone. → To end the call, place the cordless handset on the charger or press **【切】**.

 
■ **To place the current call on hold**
Press **【保留】** (Hold: **22**) during a call.

■ **To retrieve the held call**
Press **【外線】** .

■ **To transfer the held call to the base unit**
Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【0】**.)
→ Press **【切】** when the other party answers.

■ **To transfer the held call to another cordless handset**
Press **【保留】** → **【#】** during a call. → Press **【1】 - 【6】** (Intercom No.). → Press **【切】** when the other party answers.

■ Installing recording paper

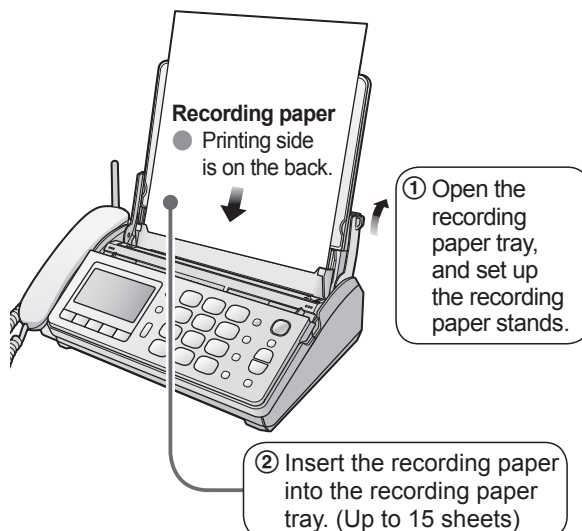

Sending faxes/Copying documents

■ **Sending faxes**
Press **【ファクス】** (Fax: **8**). → Insert the document. → Dial the fax number. → Press **【ファクス】** .

■ **Copying documents**
Insert the recording paper. → Insert the document. → Press **【コピー】** (Copy: **9**).

■ Installing document

