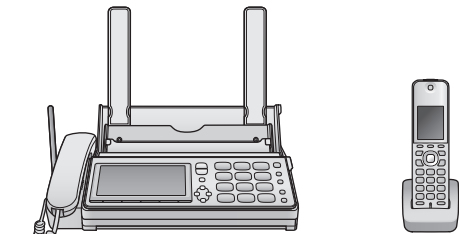
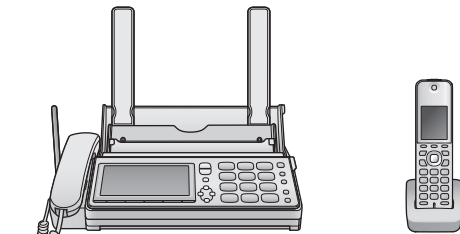


## Quick Reference Guide

Facsimile

Model No. **KX-PD625DL** **KX-PZ620DL**  
**KX-PD625DW** **KX-PZ620DW**

<p>KX-PD625DL/KX-PD625DW</p>  <p>Base unit (KX-PD625)</p> <p>Cordless handset (KX-FKD556)</p>	<p>KX-PZ620DL/KX-PZ620DW</p>  <p>Base unit (KX-PZ620)</p> <p>Cordless handset (KX-FKD556)</p>
--	---

- KX-PD625DL/KX-PZ620DL includes 1 cordless handset and 1 base unit.
- KX-PD625DW/KX-PZ620DW includes 2 cordless handsets and 1 base unit.

### Table of Contents

 
Parts Descriptions .....	2
Basic Operations .....	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

# Parts Descriptions


## Base unit

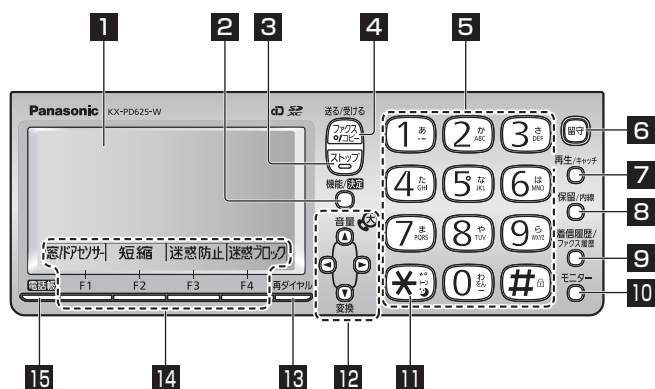

- 1 Liquid crystal display
- 2 Function/Set button
- 3 Stop button
- 4 Fax/Copy button
- 5 Numeral/Character buttons
- 6 Auto Answer button & indicator
- 7 Playback/Flash button
- 8 Hold/Intercom button
- 9 Caller ID Log/Fax Log button & indicator
- 10 Monitor button
- 11 Tone button (to switch to tone dialing)
- 12 Volume control buttons (▲ ▼)
- 13 Redial button
- 14 Multi-operation buttons
- 15 Phonebook button

## Cordless handset
 
### Backside View

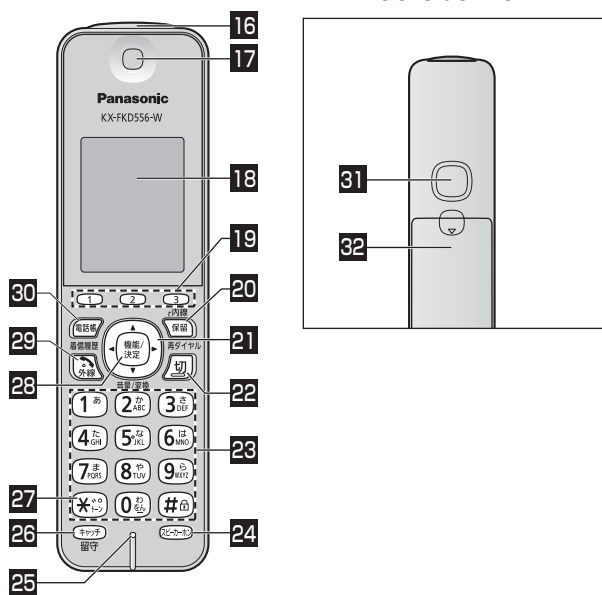

- 16 Incoming Call Indicator
- 17 Earpiece
- 18 Liquid crystal display
- 19 Multi-operation/One-touch Dial buttons
- 20 Hold/Intercom button
- 21 Caller ID button (着信履歴)
- Redial button (再ダイヤル)
- Volume control button (音量/変換)
- 22 Off button
- 23 Numeral/Character buttons
- 24 Speakerphone button
- 25 Microphone
- 26 Flash button  
留守 : Auto Answer button
- 27 Tone button (to switch to tone dialing)
- 28 Function/Set button
- 29 Talk button
- 30 Phonebook button
- 31 Speaker
- 32 Battery cover

## Basic Operations

- The number after the button shows the location of the button described in the previous page.

### Base unit

#### ■ To make a call

Lift the handset. → Dial the phone number **(5)**.  
→ Talk.

#### ■ To receive a call

When the phone rings, lift the handset. → Talk.

##### ● When:

- document reception is required,
  - a fax calling tone (slow beep) is heard, or
  - no sound is heard,
- press **【ファクス】** (Fax: **4**).

#### ■ To place the current call on hold

Press **【保留】** (Hold: **8**) during a call. (You can place the handset on the base unit.)

#### ■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press **【保留】**.

#### ■ To transfer the held call to the cordless handset

Press **【保留】** → **#** during a call. (→ When you use multiple cordless handsets, press **1** - **6** (Intercom No.).) → Place the handset on the base unit when the other party answers.

#### ■ To use TAM (Telephone Answering Machine)

When you leave home, press **【留守】** (Auto Answer: **6**) to turn on the indicator. (To deactivate, press **【留守】** again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the **【留守】** indicator starts flashing.

→ When you return home, press **【留守】** to play back the messages. The **【留守】** indicator turns off and the answering mode is deactivated. After playing back the messages, press **【はい】** (Yes: **14**) twice to erase the messages or press **【いいえ】** (No: **14**) to keep the messages.

To play back all messages while TAM is deactivated, press **【再生】** (Playback: **7**) → **【▼】** **【▲】** (**12**) to select “すべて再生” → **【決定】** (Set: **2**).

After playing back the messages, press **【はい】** (Yes: **14**) twice to erase the messages or press **【いいえ】** (No: **14**) to keep the messages.

\*Up to 50 messages can be recorded for approx. 12 minutes in total.

#### ■ To hear recorded messages while away from home (Remote control)

##### Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press **【機能】** (Function: **2**) → **#** **0** **0** **6**. →

Enter the desired 4-digit number. → Press

**【決定】**, then press **【ストップ】** (Stop: **3**).

When you leave home, press **【留守】** to turn on the indicator.

##### To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press **4**. → You will hear recorded messages if any.

##### NOTE

- This operation can be made only from a touch-tone phone.

### Cordless handset

#### ■ To make a call

Lift the cordless handset from the charger and press **【外線】** (Talk: **29**). → Dial the phone number (**23**). → Talk. → To end the call, place the cordless handset on the charger or press **【切】** (Off: **22**).

#### ■ To receive a call

When the phone rings, lift the cordless handset from the charger and press **【外線】**. → Talk. → To end the call, place the cordless handset on the charger or press **【切】**.

##### ● When:

- document reception is required,
  - a fax calling tone (slow beep) is heard, or
  - no sound is heard,
- press **【機能】** (Function: **28**) → **【▼】** **【▲】** (**21**) to select “ファクス受信” → **【決定】** (Set: **28**) → **【はい】** (Yes: **19**).

■ **To make a call using the speakerphone (Hands-free talk)**

Press **【スピーカーホン】** (Speakerphone: **24**).

→ Dial the phone number. → Talk to the microphone (**25**). → To end the call, place the cordless handset on the charger or press **【切】**.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ **To receive a call with the speakerphone (Hands-free talk)**

When the phone rings, press **【スピーカーホン】**.

→ Talk to the microphone. → To end the call, place the cordless handset on the charger or press **【切】**.

■ **To place the current call on hold**

Press **【保留】** (Hold: **20**) during a call.

■ **To retrieve the held call**

Press **【外線】**.

■ **To transfer the held call to the base unit**

Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【0】**.) → Press **【切】** when the other party answers.

■ **To transfer the held call to another cordless handset**

Press **【保留】** → **【#】** during a call. → Press **【1】 - 【6】** (Intercom No.). → Press **【切】** when the other party answers.

**Sending faxes/Copying documents**

 
■ **Sending faxes**

Press **【ファクス】** (Fax: **4**). → Insert the document. → Dial the fax number. → Press **【ファクス】**.

■ **Copying documents**

Insert the recording paper. → Insert the document. → Press **【コピー】** (Copy: **4**).

■ **Installing document**

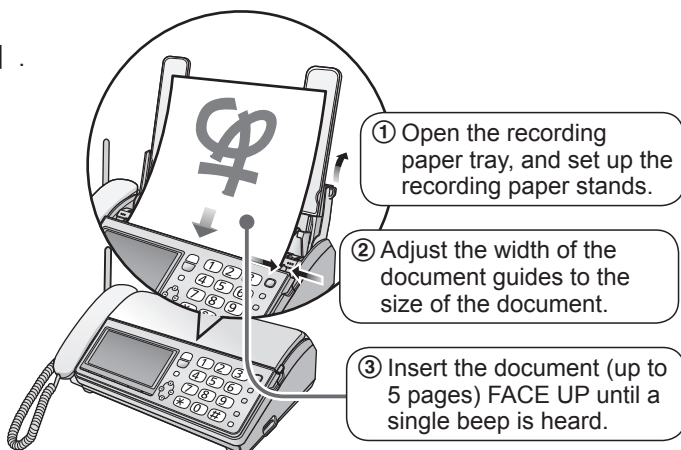

■ **Installing recording paper**

