





## Quick Reference Guide

Cordless Phone

Model No. **VE-GD37DL** **VE-GZ32DL**  
**VE-GD37DW** **VE-GZ32DW**

|   |   |   |   |
|---|---|---|---|
| VE-GD37DL/VE-GD37DW   |   | VE-GZ32DL/VE-GZ32DW   |   |
|  |  |  |  |
| Base unit<br>(VE-GD37)  | Cordless handset<br>(KX-FKD558)   | Base unit<br>(VE-GZ32)  | Cordless handset<br>(KX-FKD558)   |

- VE-GD37DL/VE-GZ32DL includes 1 cordless handset and 1 base unit.
- VE-GD37DW/VE-GZ32DW includes 2 cordless handsets and 1 base unit.

### Table of Contents

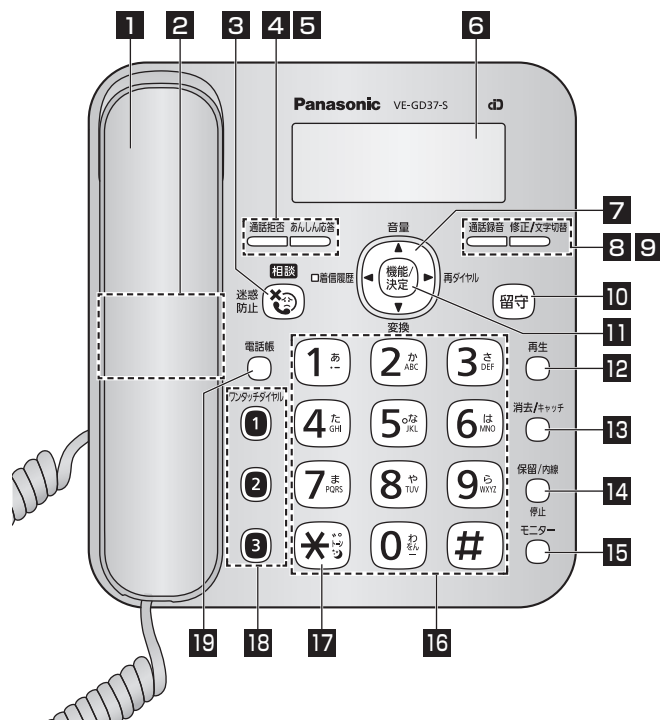 
|                          |   |
|--------------------------|---|
| Parts Descriptions ..... | 2 |
| Basic Operations .....   | 3 |

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

# Parts Descriptions

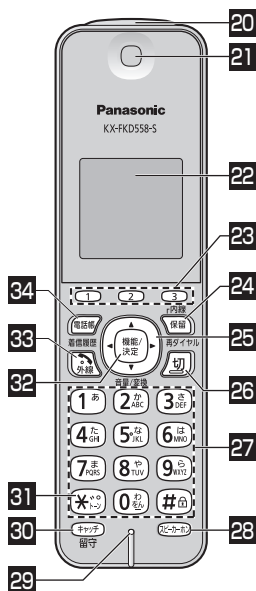 
## Base unit



- 1 Handset
- 2 Speaker
- 3 Nuisance Call Helpline/Nuisance Call Prevention button
- 4 Block button
- 5 Secure button
- 6 Liquid crystal display
- 7 Caller ID button & indicator
- 8 Redial button (着信履歴)
- 9 Volume control button (音量)
- 10 Call Record button
- 11 Edit/Character entry mode button
- 12 Auto Answer button & indicator
- 13 Function/Set button
- 14 Playback button
- 15 Clear/Flash button
- 16 Hold/Intercom/Stop button
- 17 Monitor button
- 18 Numeral/Character buttons
- 19 Tone button (to switch to tone dialing)
- 20 One-touch Dial buttons
- 21 Phonebook button

## Cordless handset

### Backside View



- 20 Incoming Call Indicator
- 21 Earpiece
- 22 Liquid crystal display
- 23 Multi-operation/One-touch Dial buttons
- 24 Hold/Intercom button
- 25 Caller ID button (着信履歴)
- 26 Redial button (再ダイヤル)
- 27 Volume control button (音量/変換)
- 28 Off button
- 29 Numeral/Character buttons
- 30 Speakerphone button
- 31 Microphone
- 32 Flash/Auto Answer button
- 33 Tone button (to switch to tone dialing)
- 34 Function/Set button
- 35 Talk button
- 36 Phonebook button
- 37 Speaker
- 38 Battery cover

# Basic Operations

- The number after the button shows the location of the button described in the previous page.

## Base unit


### ■ To make a call

Lift the handset. → Dial the phone number (16).  
→ Talk.


### ■ To receive a call

When the phone rings, lift the handset. → Talk.





### ■ To place the current call on hold

Press  (14) during a call. (You can place the handset on the base unit.)



### ■ To retrieve the held call


- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press .



### ■ To transfer the held call to the cordless handset



Press  →  during a call. (→ When you use multiple cordless handsets, press  -  (Intercom No.).) → Place the handset on the base unit when the other party answers.

### ■ To use TAM (Telephone Answering Machine)



When you leave home, press  (10) to turn on the indicator. (To deactivate, press  again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the  indicator starts flashing.

→ When you return home, press  to play back the messages. The  indicator turns off and the answering mode is deactivated.

After playing back the messages, press  (17) twice to erase the messages or press  to keep the messages.

To play back the messages while TAM is deactivated, press  (12).

After playing back the messages, press  twice to erase the messages or press  to keep the messages.

\*Up to 50 messages can be recorded for approx. 12 minutes in total.


### ■ To hear recorded messages while away from home (Remote control)


 
#### Preparation before you leave home


Store a remote control number.

With the handset placed on the base unit,


press  (機能 / 決定) (11) →     →

 (機能 / 決定) → Enter the desired 4-digit number.

→ Press  (機能 / 決定), then press  (保留 / 内線 停止).

When you leave home, press  to turn on the indicator.

#### To hear messages



Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press  (4). → You will hear recorded messages if any.

#### NOTE



- This operation can be made only from a touch-tone phone.

## Cordless handset

 

### ■ To make a call

Lift the cordless handset from the charger and press  (33). → Dial the phone number (27).  
→ Talk. → To end the call, place the cordless handset on the charger or press  (切) (26).

### ■ To receive a call

 

When the phone rings, lift the cordless handset from the charger and press  (外線). → Talk. → To end the call, place the cordless handset on the charger or press  (切).

### ■ To make a call using the speakerphone (Hands-free talk)

Press  (28). → Dial the phone number. → Talk to the microphone (29). → To end the call, place the cordless handset on the charger or press  (切).

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

### ■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press  (スピーカーホン). → Talk to the microphone. → To end the call, place the cordless handset on the charger or press  (切).




### ■ To place the current call on hold

Press  (24) during a call.

### ■ To retrieve the held call



Press .




### ■ To transfer the held call to the base unit

Press  →  during a call. (→ When you use multiple cordless handsets, press .)

→ Press  when the other party answers.

### ■ To transfer the held call to another cordless handset

Press  →  during a call. → Press

 -  (Intercom No.). → Press  when the other party answers.