 


Quick Reference Guide

Cordless Phone

Model No.	VE-GD27DL	VE-GZ228DLE
	VE-GD27DW	VE-GZ228DWE

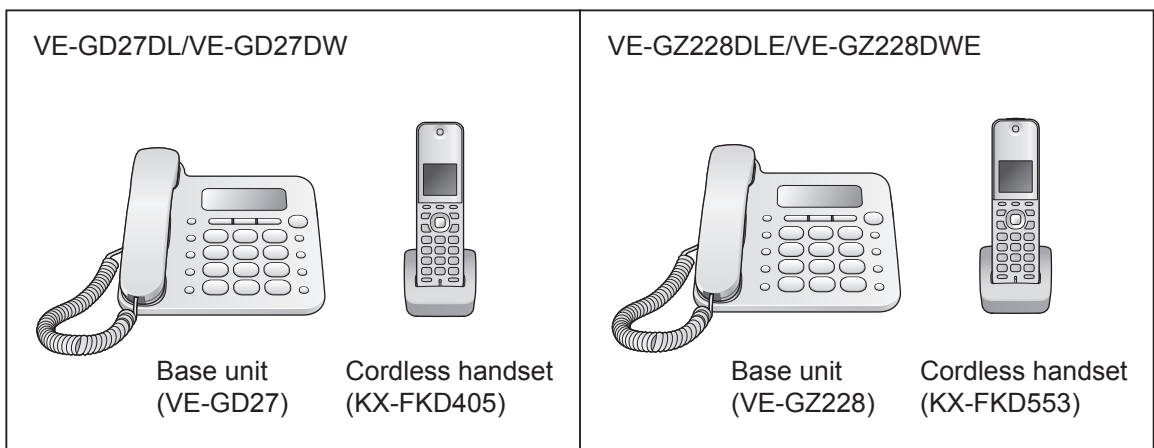

- VE-GD27DL/VE-GZ228DLE includes 1 cordless handset and 1 base unit.
- VE-GD27DW/VE-GZ228DWE includes 2 cordless handsets and 1 base unit.

Table of Contents

 
Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

Parts Descriptions

 
Base unit

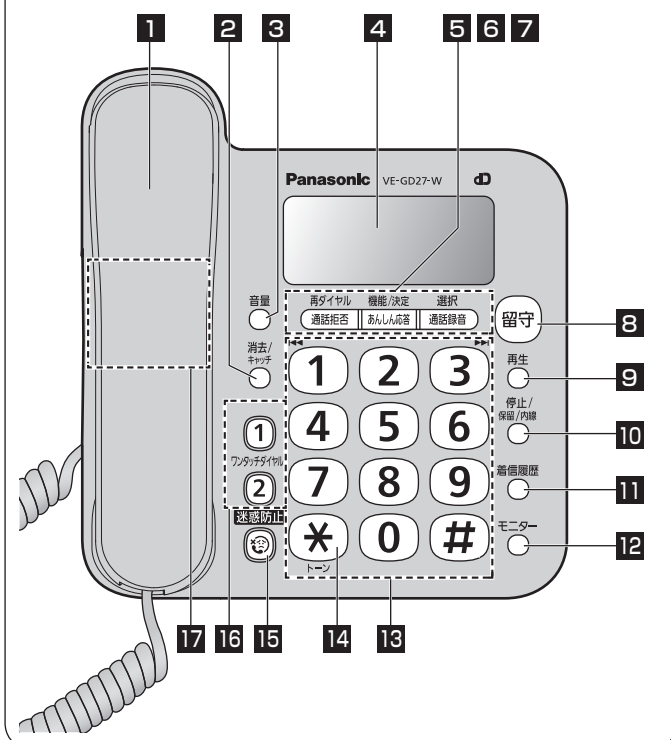

- 1 Handset
- 2 Clear/Flash button
- 3 Volume control button
- 4 Liquid crystal display
- 5 Block/Redial button
- 6 Secure/Function/Set button
- 7 Call Record/Select button
- 8 Auto Answer button & indicator
- 9 Playback button
- 10 Stop/Hold/Intercom button
- 11 Caller ID Log button
- 12 Monitor button
- 13 Numeral buttons
- 14 Tone button (to switch to tone dialing)
- 15 Nuisance Call Prevention button
- 16 One-touch Dial buttons
- 17 Speaker

Cordless handset

• The illustration shown is KX-FKD405. Please refer to the same numbers for KX-FKD553.

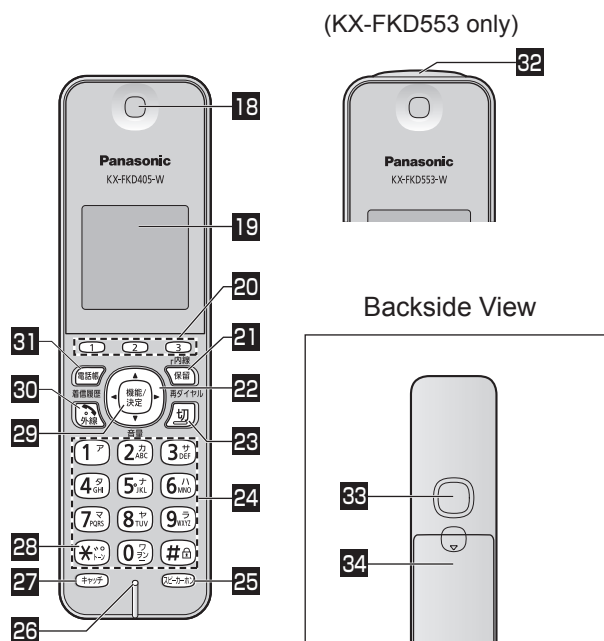

- 18 Earpiece
- 19 Liquid crystal display
- 20 Multi-operation/One-touch Dial buttons
- 21 Hold/Intercom button
- 22 Caller ID Log button (着信履歴)
- Redial button (再ダイヤル)
- Volume control button (音量)
- 23 Off button
- 24 Numeral/Character buttons
- 25 Speakerphone button
- 26 Microphone
- 27 Flash button
- 留守 : Auto Answer button (KX-FKD553 only)
- 28 Tone button (to switch to tone dialing)
- 29 Function/Set button
- 30 Talk button
- 31 Phonebook button
- 32 Incoming Call Indicator (KX-FKD553 only)
- 33 Speaker
- 34 Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit


■ To make a call

Lift the handset. → Dial the phone number **(13)**.
→ Talk.

 
■ To receive a call

When the phone rings, lift the handset. → Talk.


■ To place the current call on hold

Press  **(10)** during a call.
(You can place the handset on the base unit.)


■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press .

■ To transfer the held call to the cordless handset

Press  → **#** during a call. (→ When you use multiple cordless handsets, press **(1)** - **(6)** (Intercom No.).) → Place the handset on the base unit when the other party answers.


■ To use TAM (Telephone Answering Machine)


When you leave home, press  **(8)** to turn on the indicator.



(To deactivate, press  again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.



Then, the  indicator starts flashing.

→ When you return home, press  to play back the messages.

The  indicator turns off and the answering mode is deactivated.

After playing back the messages, press  **(14)** twice to erase the messages or press  to keep the messages.

To play back the messages while TAM is deactivated, press  **(9)**.

After playing back the messages, press  twice to erase the messages or press  to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)


 
Preparation before you leave home


Store a remote control number.

With the handset placed on the base unit, press

 **(6)** → **#** **0** **0** **6** → .

Enter the desired 4-digit number. → Press

 **(1)**, then press .

When you leave home, press  to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. →



Press **(4)**. → You will hear recorded messages if any.

NOTE



- This operation can be made only from a touch-tone phone.

Cordless handset

 

■ To make a call

Lift the cordless handset from the charger and press  **(30)**. → Dial the phone number **(24)**.
→ Talk. → To end the call, place the cordless handset on the charger or press  **(23)**.

■ To receive a call

 

When the phone rings, lift the cordless handset from the charger and press  **(30)**. → Talk. → To end the call, place the cordless handset on the charger or press .

■ To make a call using the speakerphone (Hands-free talk)

Press  **(25)**. → Dial the phone number. → Talk to the microphone **(26)**. → To end the call, place the cordless handset on the charger or press .

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press  **(25)**. → Talk to the microphone. → To end the call, place the cordless handset on the charger or press .







■ To place the current call on hold

Press  **(21)** during a call.








■ **To retrieve the held call**

Press .

■ **To transfer the held call to the base unit**

Press   during a call. ( When you use multiple cordless handsets, press ) 
Press  when the other party answers.

■ **To transfer the held call to another cordless handset**

Press   during a call.  Press  -  (Intercom No.).  Press  when the other party answers.