 


Quick Reference Guide

Facsimile

Model No. **KX-PD350DL**

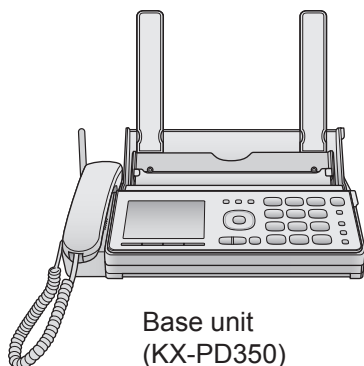

Base unit
(KX-PD350)



Cordless handset
(KX-FKD558)

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

Parts Descriptions

 
Base unit

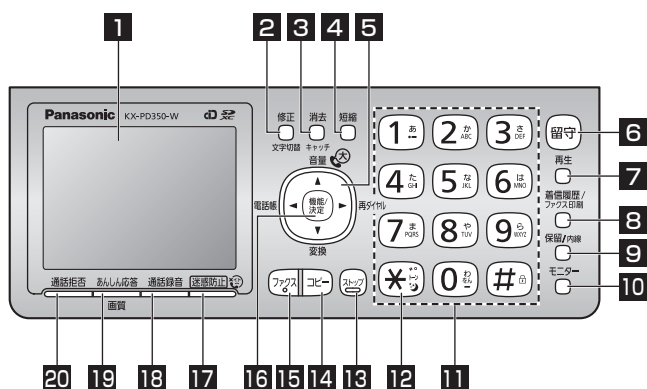

- 1** Liquid crystal display
- 2** Edit/Character entry mode button
- 3** Clear/Flash button
- 4** Speed Dialer button
- 5** Phonebook button (電話帳)
- 6** Redial button (再ダイヤル)
- 7** Playback button
- 8** Caller ID Log/Fax Print button & indicator
- 9** Hold/Intercom button
- 10** Monitor button
- 11** Numeral/Character buttons
- 12** Tone button (to switch to tone dialing)
- 13** Stop button
- 14** Copy button
- 15** Fax button
- 16** Function/Set button
- 17** Nuisance Call Prevention button
- 18** Call Record button
- 19** Secure/Resolution button
- 20** Block button

Cordless handset

 Backside View

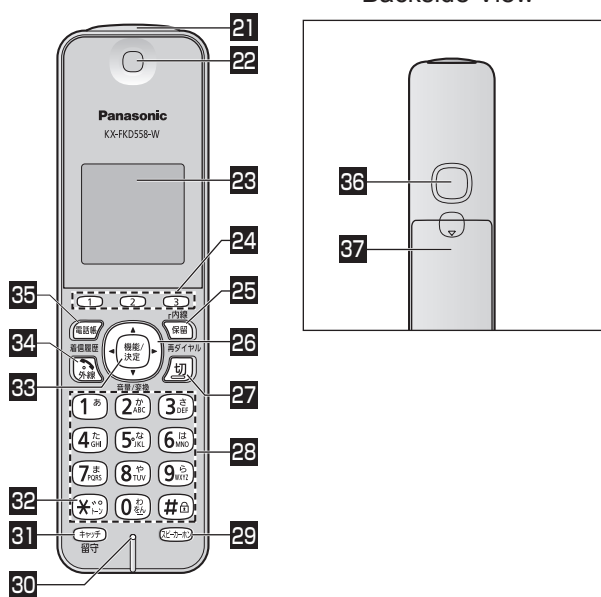

- 21** Incoming Call Indicator
- 22** Earpiece
- 23** Liquid crystal display
- 24** Multi-operation/One-touch Dial buttons
- 25** Hold/Intercom button
- 26** Caller ID button (着信履歴)
- 27** Off button
- 28** Numeral/Character buttons
- 29** Speakerphone button
- 30** Microphone
- 31** Flash button
- 32** Tone button (to switch to tone dialing)
- 33** Function/Set button
- 34** Talk button
- 35** Phonebook button
- 36** Speaker
- 37** Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit

■ To make a call

Lift the handset. → Dial the phone number (11).
→ Talk.

■ To receive a call

When the phone rings, lift the handset. → Talk.

- When:

- document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
- press **【ファクス】** (Fax: 15).

■ To place the current call on hold

Press **【保留】** (Hold: 9) during a call. (You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press **【保留】**.

■ To transfer the held call to the cordless handset

Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【1】 - 【6】** (Intercom No.).) → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press **【留守】** (Auto Answer: 6) to turn on the indicator. (To deactivate, press **【留守】** again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the **【留守】** indicator starts flashing.

→ When you return home, press **【留守】** to play back the messages. The **【留守】** indicator turns off and the answering mode is deactivated.

After playing back the messages, press **【✕】** (12) twice to erase the messages or press **【#】** to keep the messages.

To play back all messages while TAM is deactivated, press **【再生】** (Playback: 7) → **【▼】 【▲】** (5) to select “すべて再生” → **【決定】** (Set: 16).

After playing back the messages, press **【✕】** twice to erase the messages or press **【#】** to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press

【機能】 (Function: 16) → **【#】** **【0】** **【0】** **【6】** → **【決定】**.

→ Enter the desired 4-digit number. → Press

【決定】, then press **【ストップ】** (Stop: 13).

When you leave home, press **【留守】** to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. →

Press **【4】**. → You will hear recorded messages if any.

NOTE

- This operation can be made only from a touch-tone phone.

Cordless handset

■ To make a call

Lift the cordless handset from the charger and press **【外線】** (Talk: 34). → Dial the phone number (28). → Talk. → To end the call, place the cordless handset on the charger or press **【切】** (Off: 27).

■ To receive a call

When the phone rings, lift the cordless handset from the charger and press **【外線】**. → Talk. → To end the call, place the cordless handset on the charger or press **【切】**.

- When:

- document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
- press **【機能】** (Function: 33) → **【▼】 【▲】** (26) to select “ファクス受信” → **【決定】** (Set: 33) → **【はい】** (Yes: 24).

■ To make a call using the speakerphone (Hands-free talk)

Press **【スピーカーホン】** (Speakerphone: 29).

→ Dial the phone number. → Talk to the microphone (30). → To end the call, place the cordless handset on the charger or press **【切】**.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press **【スピーカーホン】**.

→ Talk to the microphone. → To end the call, place the cordless handset on the charger or press **【切】**.

 
■ **To place the current call on hold**
Press **【保留】** (Hold: **25**) during a call.

■ **To retrieve the held call**
Press **【外線】** .

■ **To transfer the held call to the base unit**
Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【0】**.)
→ Press **【切】** when the other party answers.

■ **To transfer the held call to another cordless handset**
Press **【保留】** → **【#】** during a call. → Press **【1】** - **【6】** (Intercom No.). → Press **【切】** when the other party answers.

■ Installing recording paper

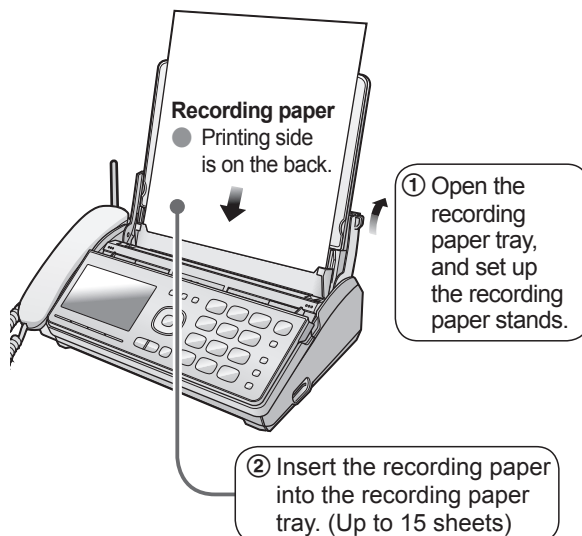

Sending faxes/Copying documents

■ **Sending faxes**
Press **【ファクス】** (Fax: **15**). → Insert the document. → Dial the fax number. → Press **【ファクス】** .

■ **Copying documents**
Insert the recording paper. → Insert the document. → Press **【コピー】** (Copy: **14**).

■ Installing document

