

## Quick Reference Guide

Cordless Phone

Model No. **VE-GD69DL**  
**VE-GD69DW**



Base unit  
(VE-GD69)



Cordless handset  
(KX-FKD556)

- VE-GD69DL includes 1 cordless handset and 1 base unit.
- VE-GD69DW includes 2 cordless handsets and 1 base unit.

### Table of Contents

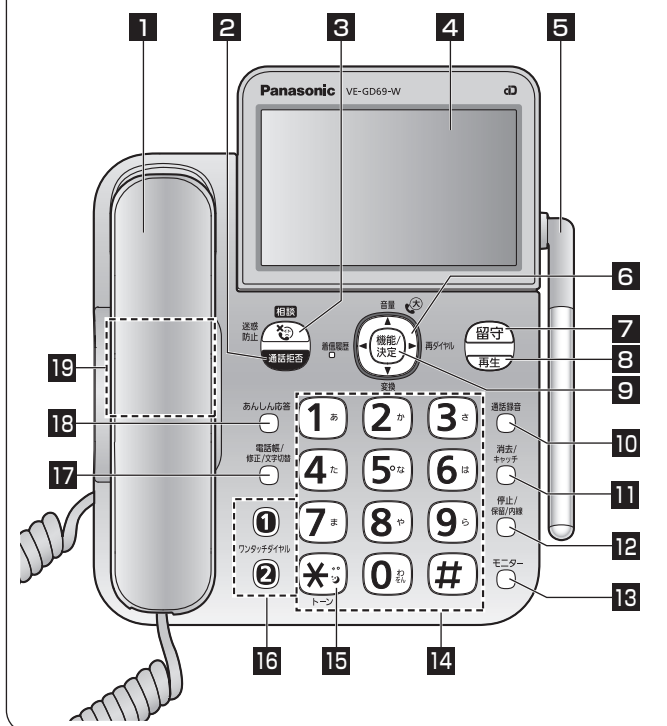 
|                          |   |
|--------------------------|---|
| Parts Descriptions ..... | 2 |
| Basic Operations .....   | 3 |

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

# Parts Descriptions

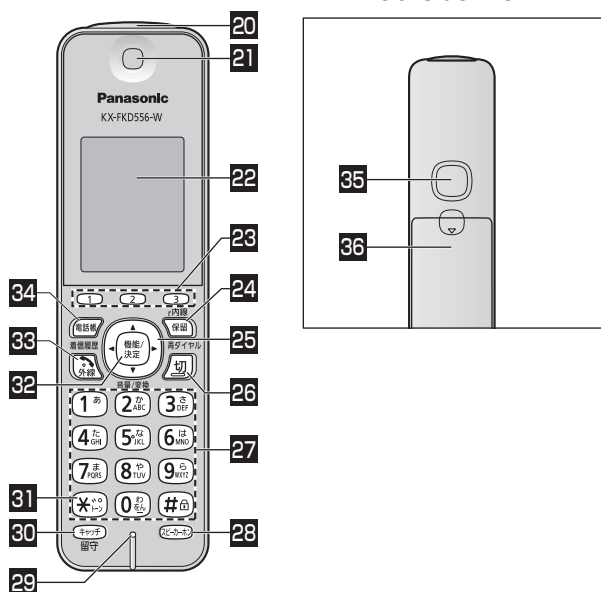 
## Base unit



- 1** Handset
- 2** Block button
- 3** Nuisance Call Prevention/Nuisance Call Helpline button
- 4** Liquid crystal display
- 5** Antenna & Call/Talk indicator
- 6** Caller ID button & indicator  
(着信履歴)
- 7** Redial button (再ダイヤル)
- 8** Volume control button (音量 変換)
- 9** Auto Answer button & indicator
- 10** Playback button
- 11** Function/Set button
- 12** Call Record button
- 13** Clear/Flash button
- 14** Stop/Hold/Intercom button
- 15** Monitor button
- 16** Numeral/Character buttons
- 17** Tone button (to switch to tone dialing)
- 18** One-touch Dial buttons
- 19** Phonebook/Edit/Character entry mode button
- 20** Secure button
- 21** Speaker (Base unit)

## Cordless handset

### Backside View



- 20** Incoming Call Indicator
- 21** Earpiece
- 22** Liquid crystal display
- 23** Multi-operation/One-touch Dial buttons
- 24** Hold/Intercom button
- 25** Caller ID button (着信履歴)
- 26** Redial button (再ダイヤル)
- 27** Volume control button (音量/変換)
- 28** Off button
- 29** Numeral/Character buttons
- 30** Speakerphone button
- 31** Microphone
- 32** Flash button
- 33** Auto Answer button (留守)
- 34** Tone button (to switch to tone dialing)
- 35** Function/Set button
- 36** Talk button
- 37** Phonebook button
- 38** Speaker
- 39** Battery cover

## Basic Operations

- The number after the button shows the location of the button described in the previous page.

### Base unit


#### ■ To make a call

Lift the handset. → Dial the phone number **(14)**.  
→ Talk.


#### ■ To receive a call

When the phone rings, lift the handset. → Talk.



#### ■ To place the current call on hold

Press  **(12)** during a call. (You can place the handset on the base unit.)



#### ■ To retrieve the held call


- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press .



#### ■ To transfer the held call to the cordless handset



Press  →  during a call. (→ When you use multiple cordless handsets, press **(1)** - **(6)** (Intercom No.).) → Place the handset on the base unit when the other party answers.

#### ■ To use TAM (Telephone Answering Machine)


When you leave home, press  **(7)** to turn on the indicator. (To deactivate, press  again to turn off the indicator.)



→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the  indicator starts flashing.

→ When you return home, press  to play back the messages. The  indicator turns off and the answering mode is deactivated.

After playing back the messages, press  **(15)** twice to erase the messages or press  to keep the messages.

To play back all messages while TAM is deactivated, press  **(8)** →  **(6)** to

select “**すべて再生**” →  **(機能/決定)** **(9)**.

After playing back the messages, press  twice to erase the messages or press  to keep the messages.

\*Up to 99 messages can be recorded for approx. 120 minutes in total.

#### ■ To hear recorded messages while away from home (Remote control)



##### Preparation before you leave home


Store a remote control number.

With the handset placed on the base unit, press

 **(機能/決定)** →  **(#)**    →  **(機能/決定)** →


Enter the desired 4-digit number. → Press  **(機能/決定)**.

 **(機能/決定)**, then press  **(機能/決定)**.

When you leave home, press  to turn on the indicator.

##### To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. →



Press  **(4)**. → You will hear recorded messages if any.

##### NOTE


 
- This operation can be made only from a touch-tone phone.

### Cordless handset

 

#### ■ To make a call

Lift the cordless handset from the charger and press  **(外線)** **(33)**. → Dial the phone number **(27)**.  
→ Talk. → To end the call, place the cordless handset on the charger or press  **(切)** **(26)**.

#### ■ To receive a call

 

When the phone rings, lift the cordless handset from the charger and press  **(外線)**. → Talk. → To end the call, place the cordless handset on the charger or press  **(切)**.

#### ■ To make a call using the speakerphone (Hands-free talk)

Press  **(スピーカ)** **(28)**. → Dial the phone number. → Talk to the microphone **(29)**. → To end the call, place the cordless handset on the charger or press  **(切)**.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

#### ■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press  **(スピーカ)**. → Talk to the microphone. → To end the call, place the cordless handset on the charger or press  **(切)**.





■ **To place the current call on hold**

Press  (24) during a call.






■ **To retrieve the held call**

Press .

■ **To transfer the held call to the base unit**

Press  →  during a call. ( → When you use multiple cordless handsets, press .) → Press  when the other party answers.

■ **To transfer the held call to another cordless handset**

Press  →  during a call. → Press  -  (Intercom No.). → Press  when the other party answers.